

Introduction

The thermostat has the following approximate settings

Rotate the thermostatic head clockwise and anti-clockwise between ***** and 5 to select the required room temperature. Align the number with the vertical indicator as shown.

The thermostatic head has within its range a frost setting *****. When set at the ***** position the thermostatic head will react when the ambient temperature drops to 7°C and allows the valve to open. Note: Hot water must be circulating within the heating system.

Technical Specification

 Nominal flow rate: Max flow rate: Maximum working pressure: Maximum pressure differential: Maximum water temperature: Maximum ambient temperature: 	150kg/h 470kg/h 10 bar 1 bar 100°C 50°C
 Maximum ambient temperature: Temperature adjustment range: 	50°C 7 to 28°C
 Temperature adjustment range: Response time: 	7 to 28°C 24 min
 Water temperature effect Hysteresis at nominal flow rate 	1.40 K 0.80 K

Dimensions

