



TIMER, ELECTRONIC, 7 DAY - USER GUIDE

Vogue Combi c26, c32, c40

When replacing any part on this appliance, use only spare parts that you can be assured conform to the safety and performance specification that we require.

Do not use reconditioned or copy parts that have not been clearly authorised by Ideal.

Vogue Combination boiler

Timer, Electronic, 7 Day


Contents	Page
Timer	3
Timed/On/Off	4
+ Hours	5
Time/Date	6
Time Program	7
Holiday Mode.....	8
Display Backlight Intensity.....	9
Reset to Factory Settings	11

Summer/Winter Time (GMT/BST) - automatically updated



The national regulations and respective safety instructions are to be observed. Interferences and changes to the device will lead to cancellation of the warranty.


Timer, Electronic, 7 Day

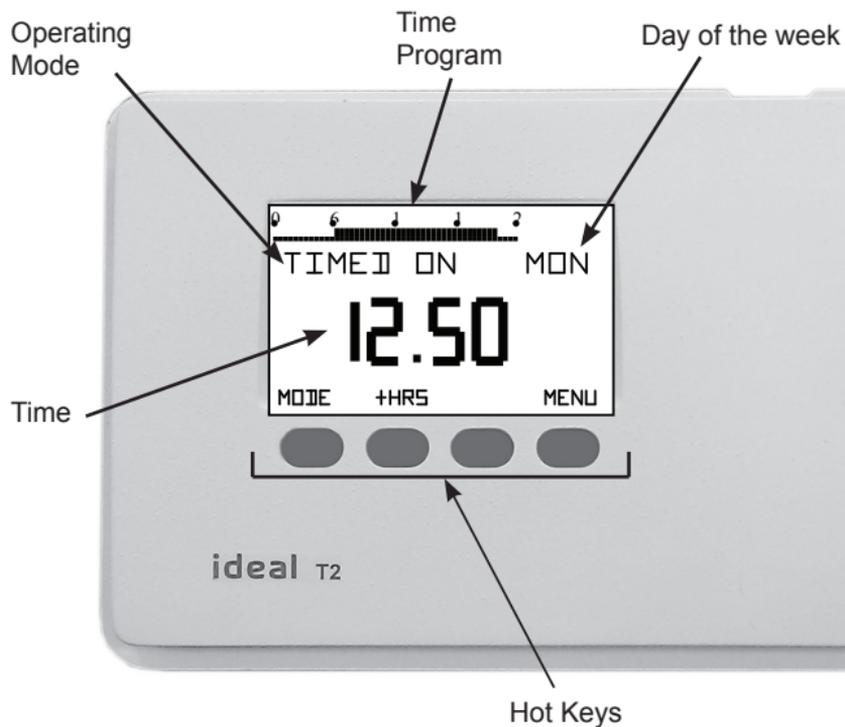


Note: if the Low Battery symbol is visible or the display is blank then replace the batteries

Timed, Continuously On and Continuously Off operation


To set the Central Heating for Timed operation
press MODE until “TIMED ON” or “TIMED OFF” is shown.

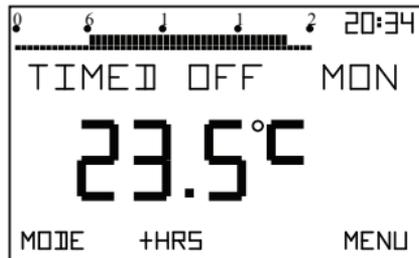

To set Central Heating to be Continuously On
press MODE until “CONT ON” is shown.

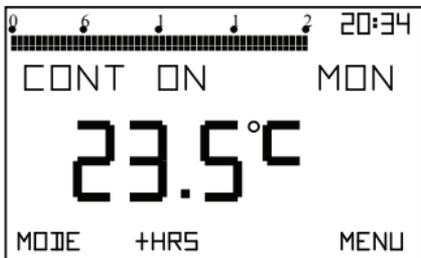


To set Central Heating to be Continuously Off
press MODE until “CONT OFF” is shown.

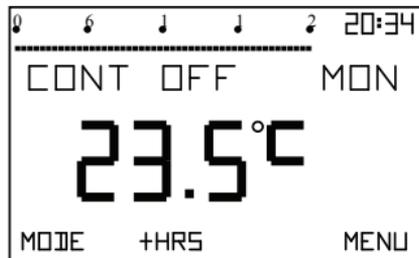

+ Hours

If + Hours is used during an on period, the Central Heating on period will be extended by up to 5 hours.

To set + Hours press “+HOURS” and this screen will be shown.

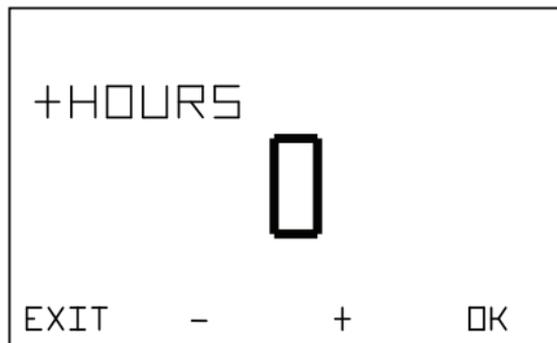

Press “+” until the required setting is shown and then press OK

Time/Date

Summer/Winter time is automatically updated

At installation the "SET TIME/DATE" menu option activates automatically (starts at step 2)

1. Press MENU and this screen will be displayed

HEATING PROGRA

EXIT PREV NEXT OK

5. Press OK and this screen will be displayed. Press "+" and "-" until the current YEAR is shown.

SET YEAR

20 12

EXIT - + OK

2. Press NEXT until this screen is displayed

SET TIME/DATE

EXIT PREV NEXT OK

6. Press OK and this screen will be displayed. Press "+" and "-" until the current MONTH is shown.

SET MONTH

01

EXIT - + OK

3. Press OK and this screen will be displayed. Press "+" and "-" until the correct HOURS is shown.

SET HOURS

20:34

EXIT - + OK

7. Press OK and this screen will be displayed. Press "+" and "-" until the current DAY is shown.

SET DAY

02.01

EXIT - + OK

4. Press OK and this screen will be displayed. Press "+" and "-" until the correct MINUTES is shown.

SET MINUTES

20:34

EXIT - + OK

8. Press OK and this screen will be displayed. When it disappears press EXIT to return to normal operation

TIME/DATE SET

Time Program

1 Press MENU and this screen will be displayed, then press OK.

HEATING PROGRA

EXIT PREV NEXT OK

2 Press “+” and “-” until the desired Hours figure is shown and then press OK Press “+” and “-” until the desired Minutes figure is shown and then press OK

MON ON TIME 1

6:00

DAY - + OK

3 Press “+” and “-” until the desired Hours figure is shown and then press OK Press “+” and “-” until the desired Minutes figure is shown and then press OK

MON OFF TIME 1

8:00

DAY - + OK

4 Press “+” and “-” until the desired Hours figure is shown and then press OK Press “+” and “-” until the desired Minutes figure is shown and then press OK

MON ON TIME 2

16:00

DAY - + OK

5 Press “+” and “-” until the desired Hours figure is shown and then press OK Press “+” and “-” until the desired Minutes figure is shown. If you would like to set a 3rd On period continue programming in the same manner, otherwise press DAY.

MON OFF TIME 2

22:00

DAY - + OK

6 Press YES to Copy Monday’s On/Off times to Tuesday, otherwise press NO.

COPY MON → TUE

YES NO

7 Program the remainder of the times in the same manner before pressing EXIT to return to the Menu and then EXIT again to return to normal operation

Holiday Mode

1 Press MENU and this screen will be shown.

HEATING PROGRA

EXIT PREV NEXT OK

5. Press “OK” and this screen will be shown. Press “+” and “-” until the desired Holiday Month is shown.

MONTH

0 1

EXIT - + OK

2 Press NEXT until this screen is shown.

HOLI IAY

EXIT PREV NEXT OK

6. Press “OK” and this screen will be shown. Press “+” and “-” until the desired Holiday Day is shown.

IAY

20 12

02.0 1

EXIT - + OK

3 This screen will be shown briefly before automatically moving to the next screen

START HOLI IAY

7. Press “OK” and this screen will be shown. Press “+” and “-” until the required Holiday Duration is shown.

NUMBER OF IAYS

14

EXIT - + OK

4 Press “+” and “-” until the desired Holiday Year is shown.

YEAR

20 12

EXIT - + OK

8 Press “OK” and this screen will be briefly shown before moving to the Menu, press EXIT to return to normal operation

HOLI IAY SET

Display Backlight Intensity

To change the LCD backlight intensity proceed as follows.

1 Press MENU and this screen will be shown.



HEATING PROGRA

EXIT PREV NEXT OK

2 Press NEXT until this screen is shown.



LCD BACKLIGHT

EXIT PREV NEXT OK

3 Press OK and this screen will be shown, then press “+” or “-” until the required setting is shown. Press OK to return to the Menu and then EXIT to return to normal operation.



LCD BACKLIGHT


3

EXIT - + OK


Reset To Factory Settings

The Timer can be returned to Factory Settings as follows.


1 Press MENU and this screen will be shown.

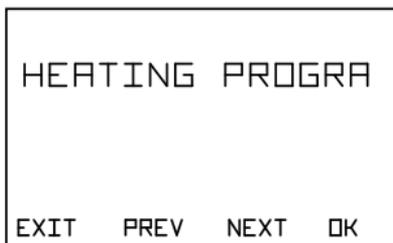


3 Press OK and this screen will be shown.

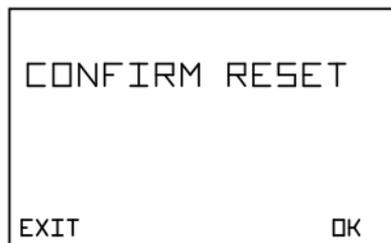

2 Press NEXT until this screen is shown.

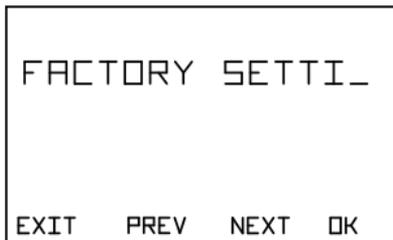

4 Press OK to Reset and this screen will be briefly shown before returning to the Menu.

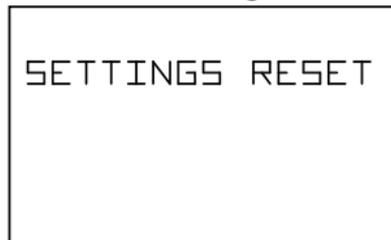

Press EXIT to return to normal operation.

August 2012 UIN 208904 A01

Ideal Stelrad Group pursues a policy of continuing improvement in the design and performance of its products. The right is therefore reserved to vary specification without notice.

Ideal, P.O. Box 103, National Ave, Kingston Upon Hull, HU5 4JN. Tel. 01482 492251 Fax. 01482 448858. Registration No. London 322 137.



ideal